



# 8- Unit Operation

## A- The Remote Control

### i- HWC,CFU TYPE

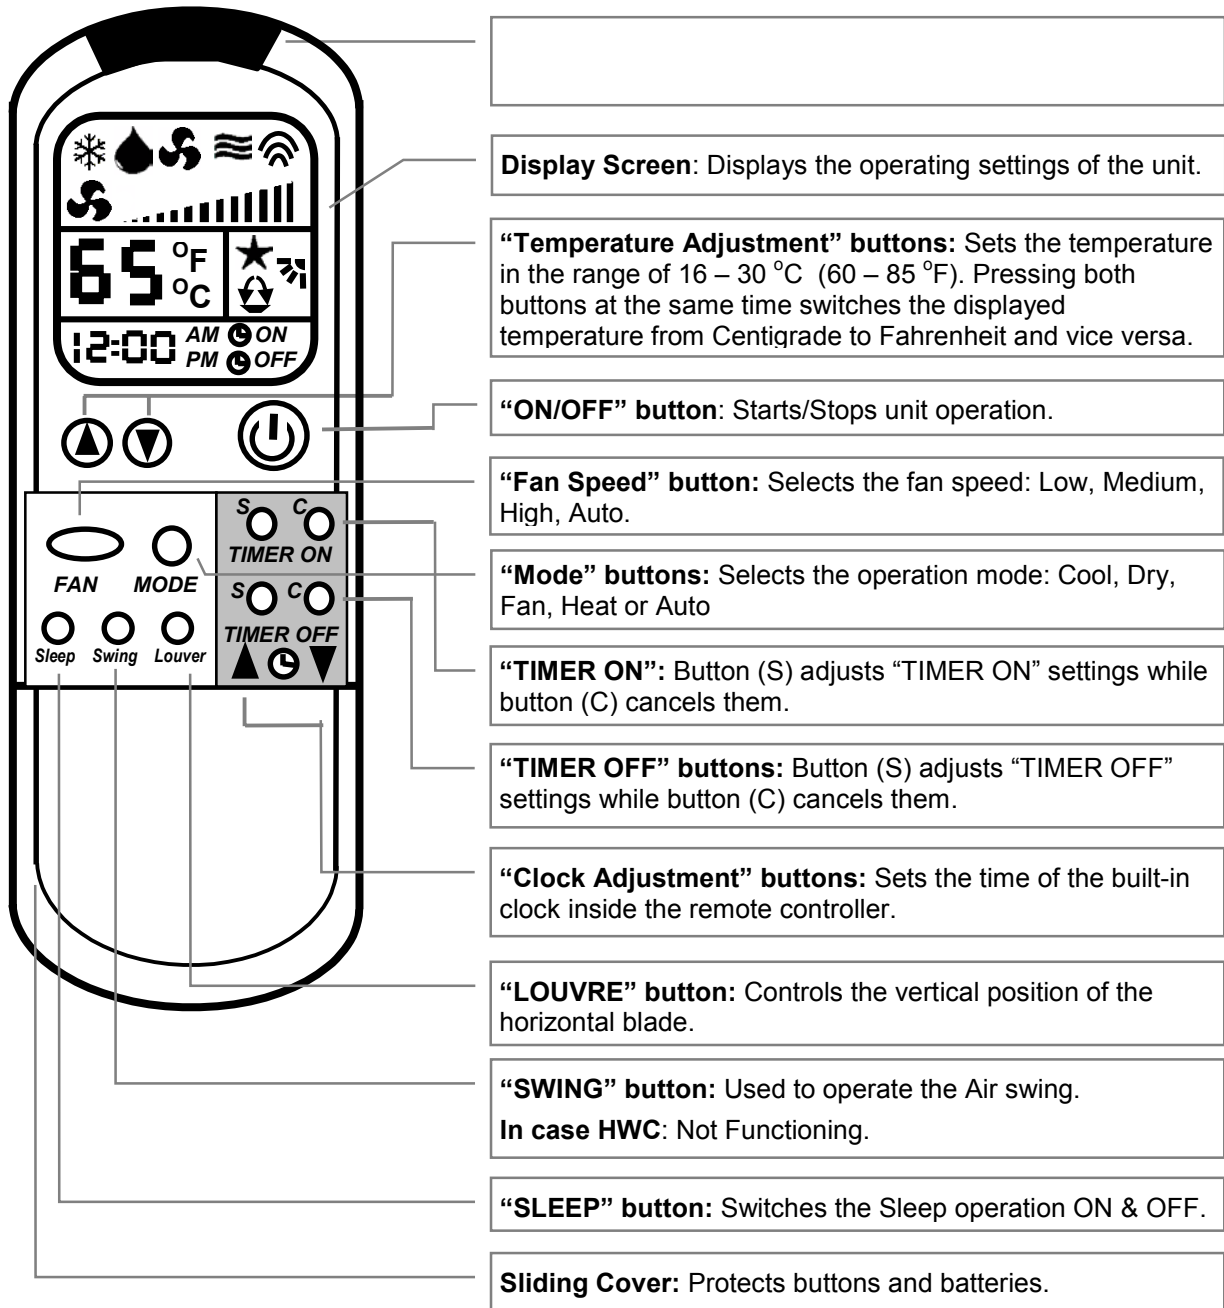

## The Display Screen Components

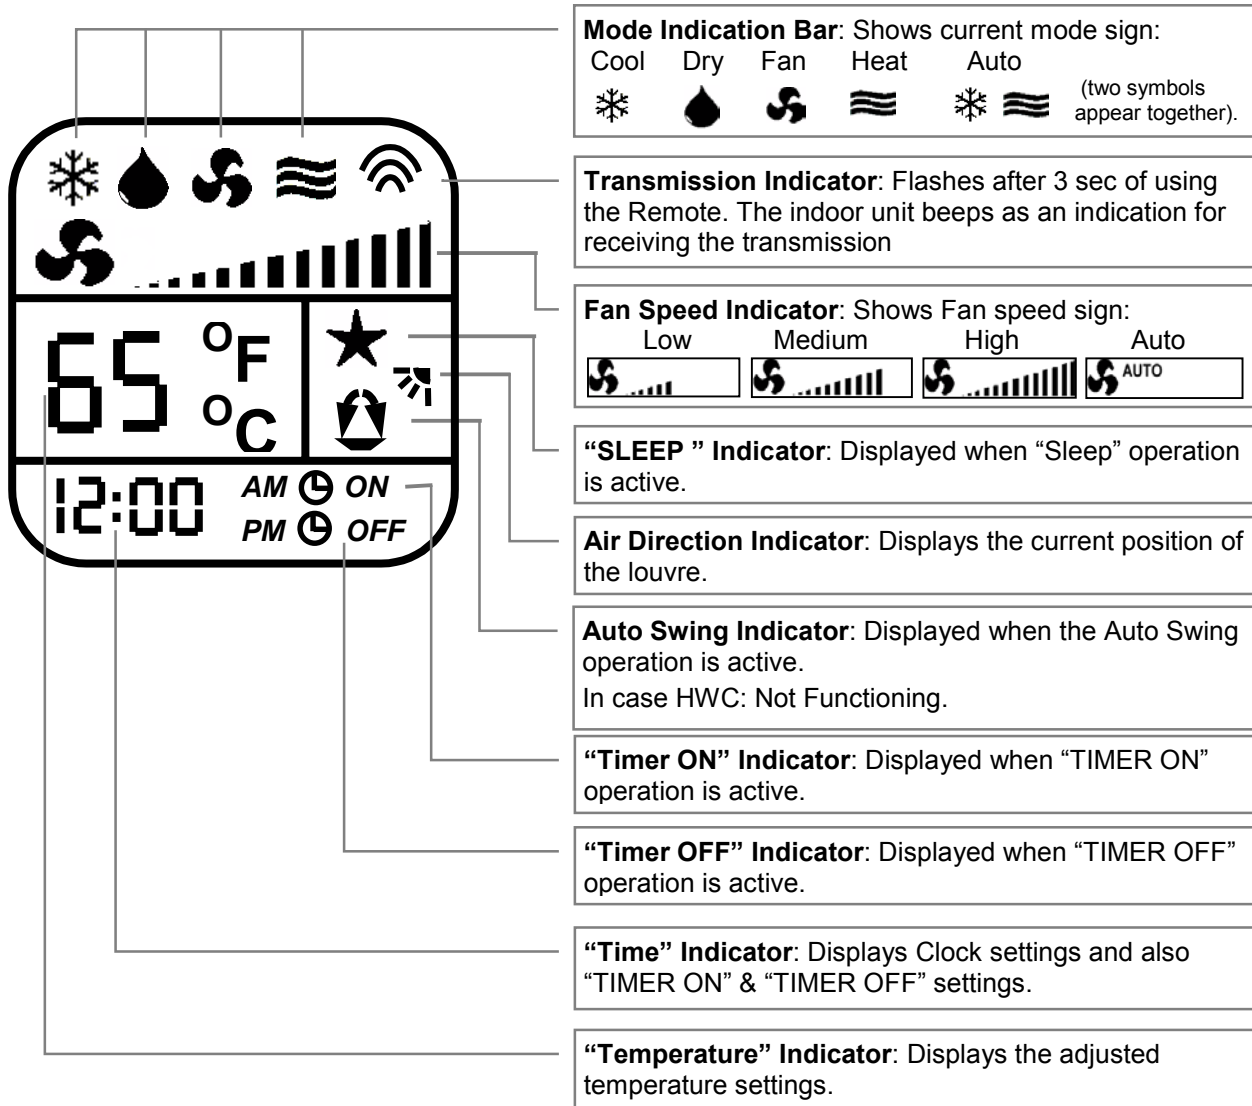

## Remote Controller Power

The remote controller operates with 2 batteries of size AAA with 1.5 Volts.

### Changing Batteries

The batteries have to be changed when the remote does not send its signals to the indoor unit or when the display screen becomes unclear.

- Open the sliding cover to its full extent and press softly with your thumb while pulling the cover down till it comes out of its sliding way showing the battery compartment.
- Remove the used batteries and insert a pair of new batteries.
- Re-install the sliding cover and test the remote controller work.
- If the indoor unit beeps, then the change process was successful other wise, check battery positioning or replace them.

